



zintra™
SUSPENDED SCREEN
INSTALL GUIDE

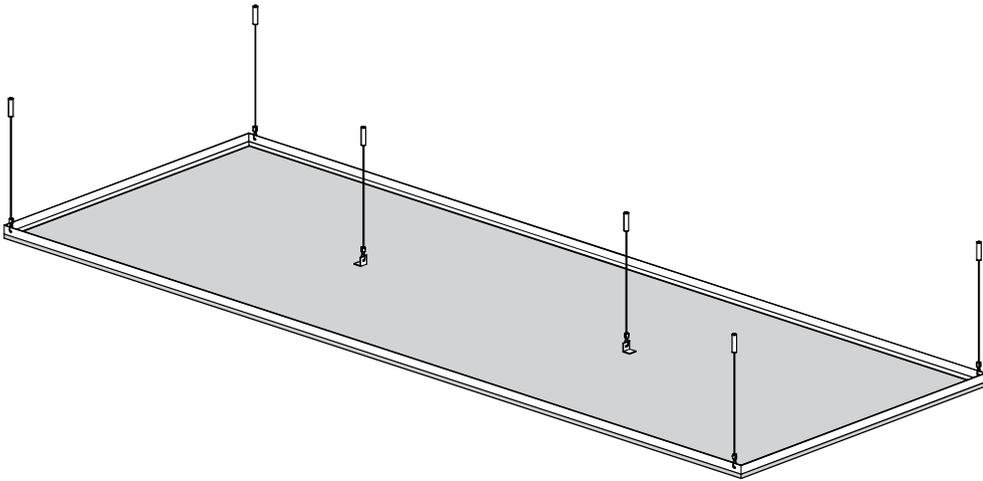

Toll free 1.800.268.1300 Sans frais 1.800.361.7881
TORONTO | 88 Ronson Drive, Etobicoke, Ontario M9W 1B9
MONTREAL | 4269 Ste. Catherine Ouest #701 Montreal, Quebec H3Z 1P7
VANCOUVER | 611 Alexander Street, Suite 106 Vancouver, British Columbia V6A 1E1

1. Mark out hole locations for 6 off fixing points as per corresponding mounting holes on aluminium support frame.

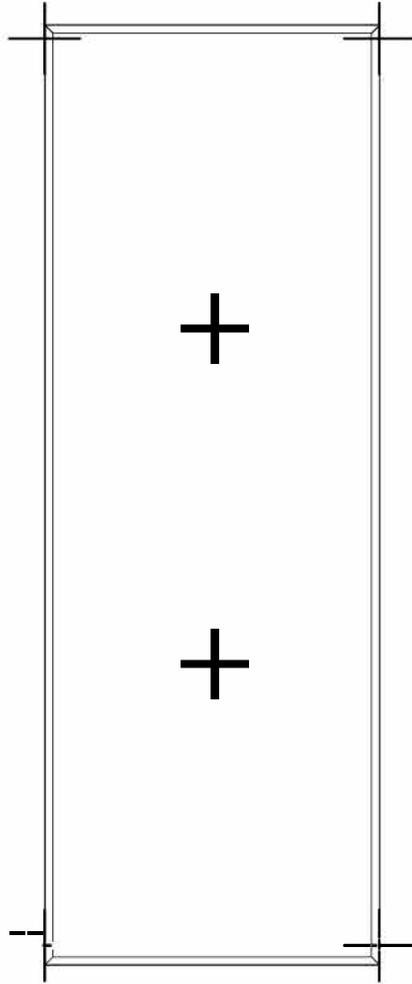


REFLECTED CEILING PLAN VIEW

2. Drill and fix off M 10 studs (supplied) in appropriate anchor for application.




- M 10 studs (supplied) to be secured into M 10 anchor. Anchor to be appropriate for ceiling material.



3. Feed swaged wire through 'dead end' and screw dead end securely onto M10 stud (6 off)

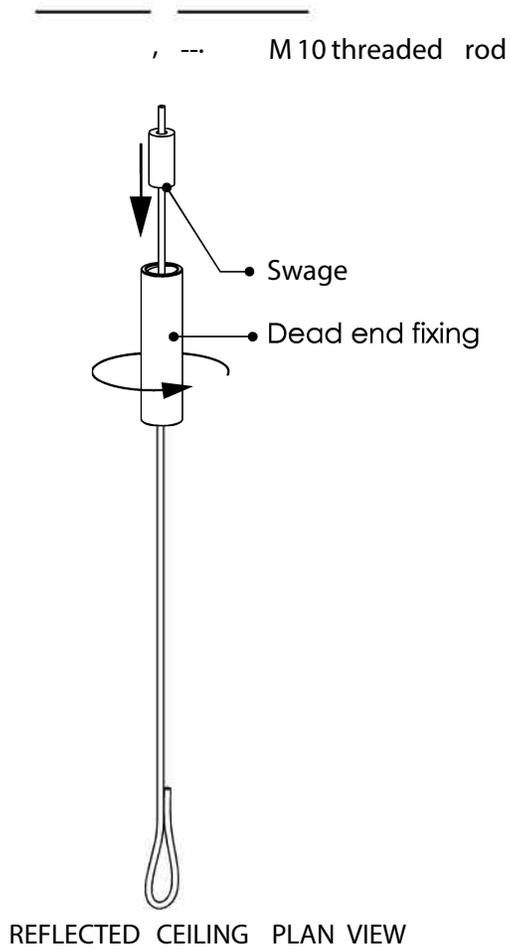


4. Feed collar onto loose end of wire and then feed wire through fixing holes in aluminium support frame before feeding back through collar and clamping secure via grub screw.

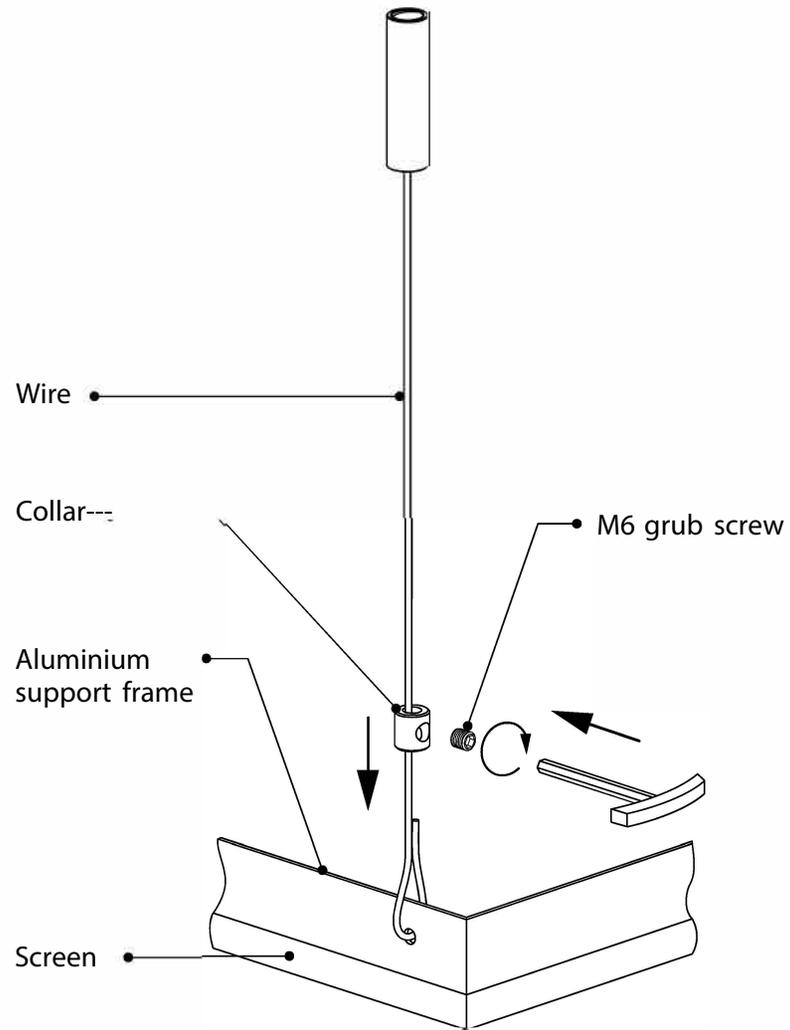

5. Repeat step 4 for remaining fixingpoints.

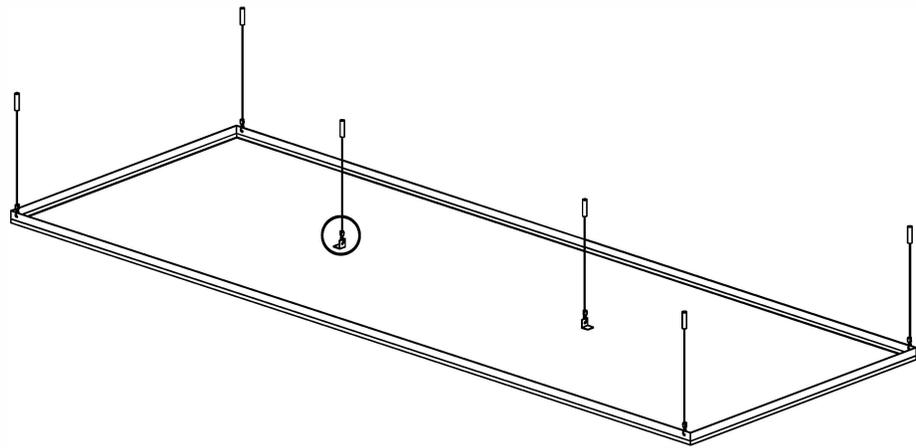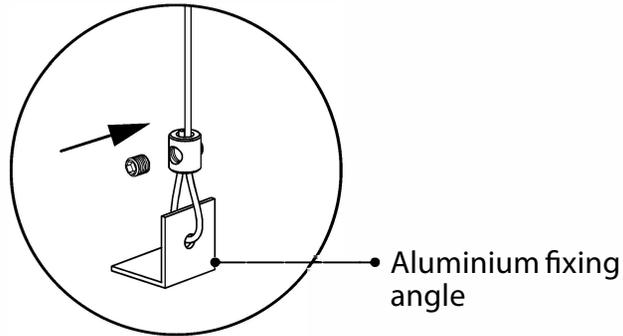

6. Adjust wire suspension height accordingly to ensure level hanging of screen.

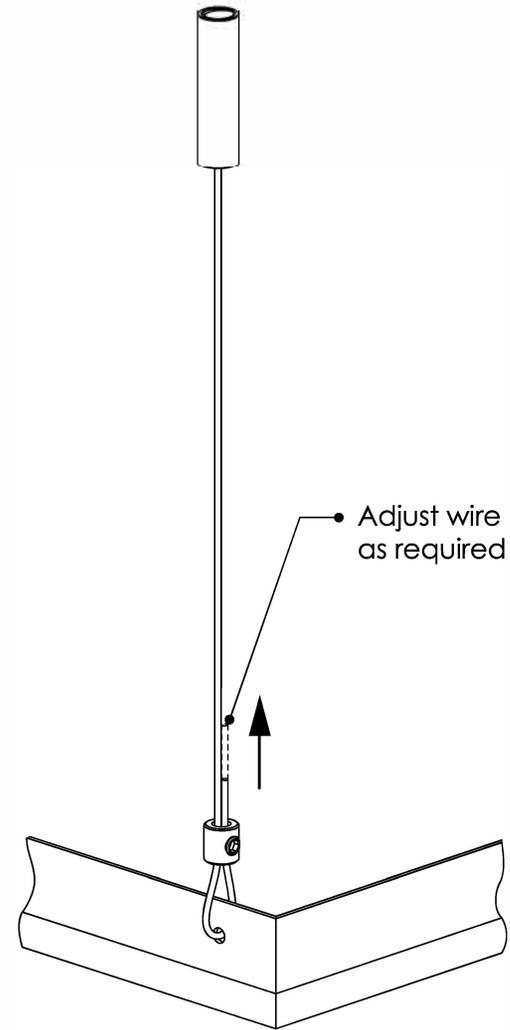

SUSPENDED SCREEN
INSTALL GUIDE